


Tapping Block Instructions

For use with TrafficMaster™ Allure® Ultra
with SimpleFit™ Locking Technology



STEP 1

Insert the lengthwise tongue into the lengthwise groove of the previously installed row.

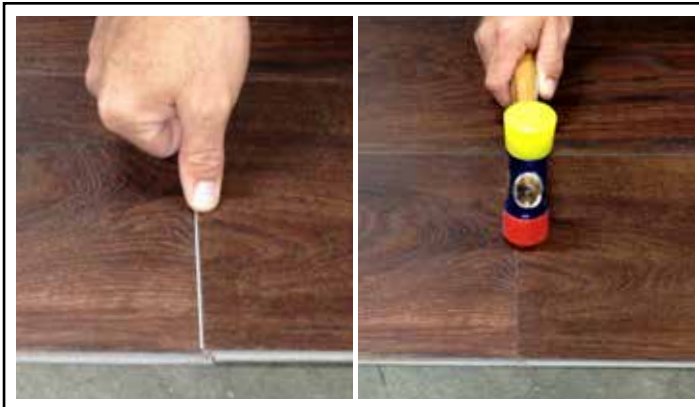

STEP 2

Press the short-side end joint with the SimpleFit™ white locking strip into the short-side groove of the previously installed plank. Using a rubber mallet, gently tap until the short-side end joint is fully engaged.



STEP 3

Use a hammer or mallet to gently tap along the lengthwise groove with the TrafficMaster™ Allure® Tapping Block. Ensure the plank is completely tight before moving onto the next plank installation.